
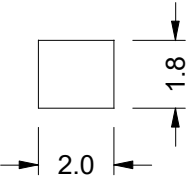


REVISIONS			
REV	REVISED PER	Date	Approved
A	initial release	2006 may 30	
B	C.N. 2409	2013 aug 23	IJM



- Notes:
1. Dimensions  $\pm 0.01$  mm except thickness.
  2. Thickness  $20 \pm 1$   $\mu$ m.
  3. Scratch dig, 20-10 both sides.
  4. Flat, parallel, less than 1 fringe/50 mm.

20  $\mu$ m etalon  
 LightMachinery OP-2608

dimensions mm	material: Corning 7980 0A
Tolerances (unless otherwise noted) X $\pm 0.5$ A $\pm 1^\circ$ X.X $\pm 0.1$ A.A $\pm 0.1^\circ$ X.XX $\pm 0.025$	Scale 5:1 Third angle projection 

Drawing Template QT-730-002-E

This design and print is the property of LightMachinery, Inc., and shall not be used as the basis for the manufacture or sale of apparatus without the written permission of LightMachinery, Inc.